




# High Lumen High Bay Installation Instructions

## Cautions

1. Make sure power is removed or turned off before installing product.
2. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and hazards involved.
3. The product must be installed in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety.

## Précautions

1. Veillez à ce que le pouvoir est supprimé ou désactivé avant d'installer le produit.
2. Ce produit doit être installé conformément au code d'installation en vigueur par une personne familière avec la construction et l'exploitation des produits et des risques impliqués.
3. Le produit doit être conforme au Code électrique National et tous les codes. Raccordée à la terre est nécessaire pour la sécurité.

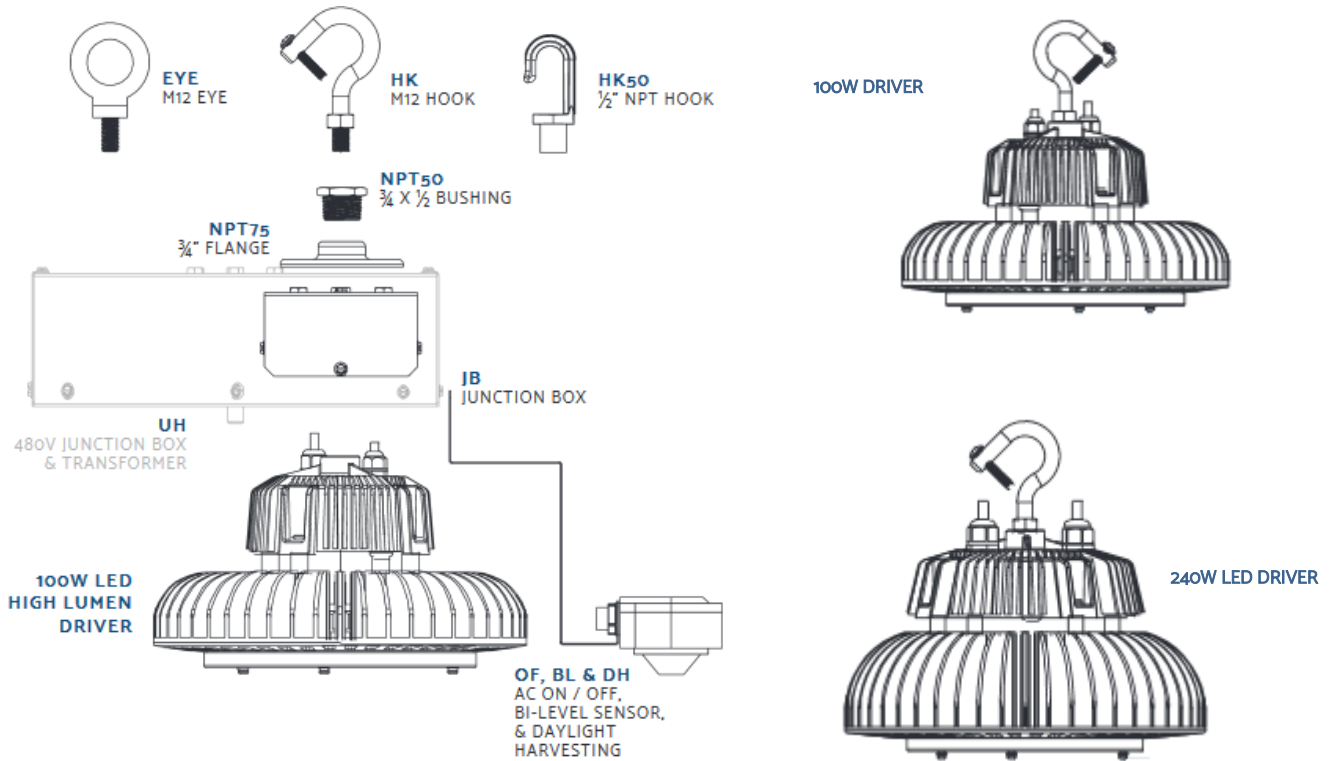

## Mounting

- Select desired fixture location. Using specified mounting option, secure fixture in place with appropriate hardware. Make sure mounting location is suitable for weight of fixture.

## Wiring


- **Standard Fixture:** In properly rated junction box, connect supply line to driver pigtail, follow wiring diagrams.
- **Fixture Junction Box:** Feed Supply line into junction box on top of fixture, follow wiring diagrams.
- **Cord Option:** Secure cord plug to corresponding receptacle.

## Wiring Diagrams

- Make sure power is off or removed before making any electrical connections.
- All connections must be completed within junction box located on top of fixture or within an appropriately rated junction box near fixture. All electrical connections must be in-line with standards set by the National Electrical Code and all applicable local codes.
- All cords must be appropriately secured to corresponding receptacle.


### 120-277V

120-277V AC

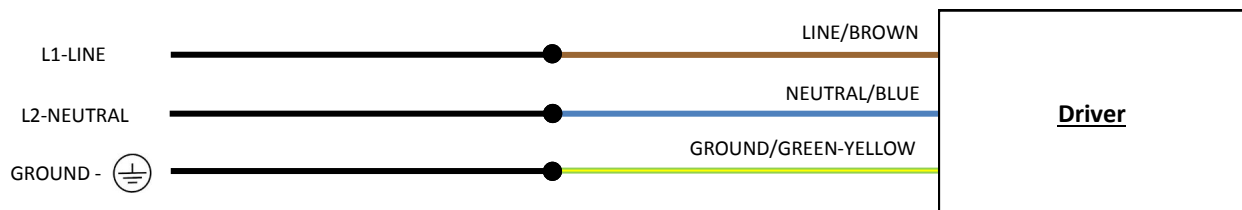

### Dimmable

120-277V AC

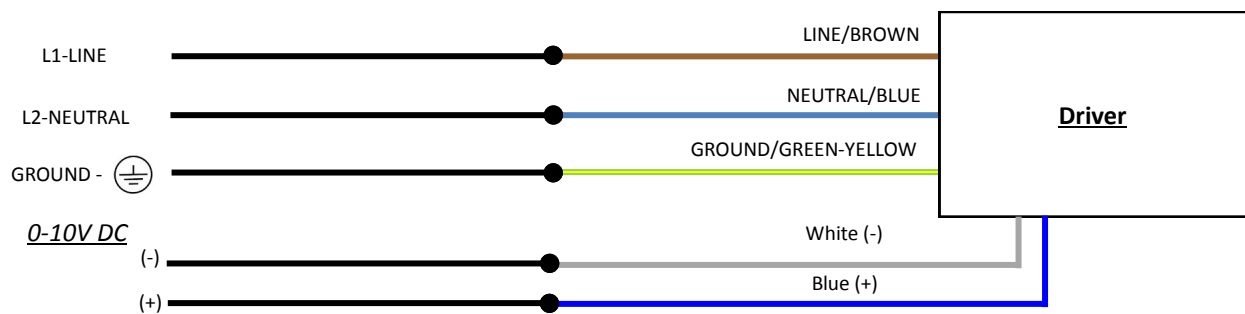



**On/Off**

120-277V AC

L1-LINE  
L2-NEUTRAL  
GROUND -

LINE/BLACK  
NEUTRAL/WHITE  
LOAD/RED  
Violet (+)  
Gray (-)  
White (-)  
Blue (+)  
LINE/BROWN  
NEUTRAL/BLUE  
GROUND/GREEN-YELLOW

On-Off / Bi-Level  
Occupancy Sensor

Driver

**Bi-Level**


120-277V AC

L1-LINE  
L2-NEUTRAL  
GROUND -


Violet (+)  
Gray (-)  
White (-)  
Blue (+)  
LINE/BROWN  
NEUTRAL/BLUE  
GROUND/GREEN-YELLOW

On-Off / Bi-Level  
Occupancy Sensor

Driver

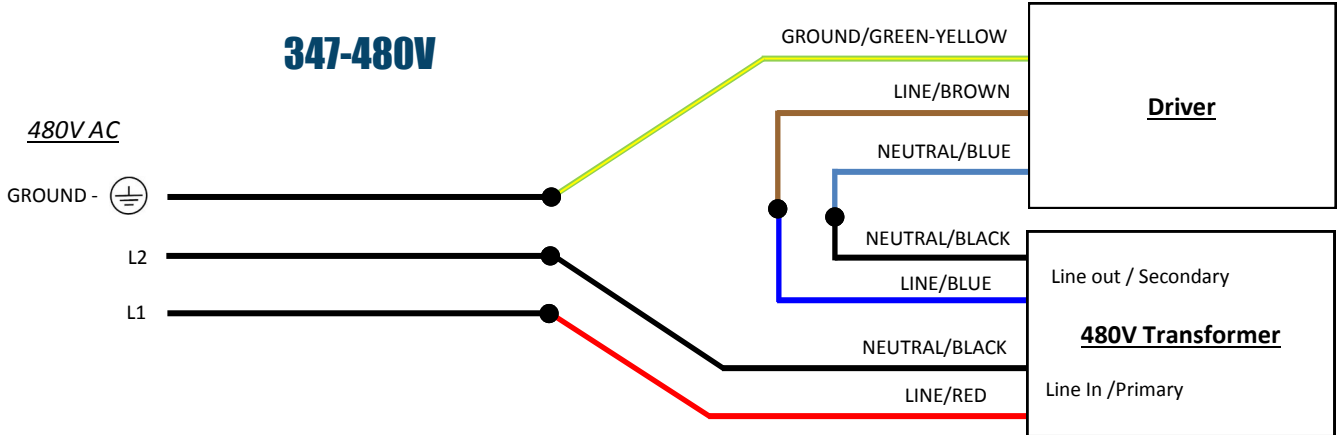

## Emergency Ballast

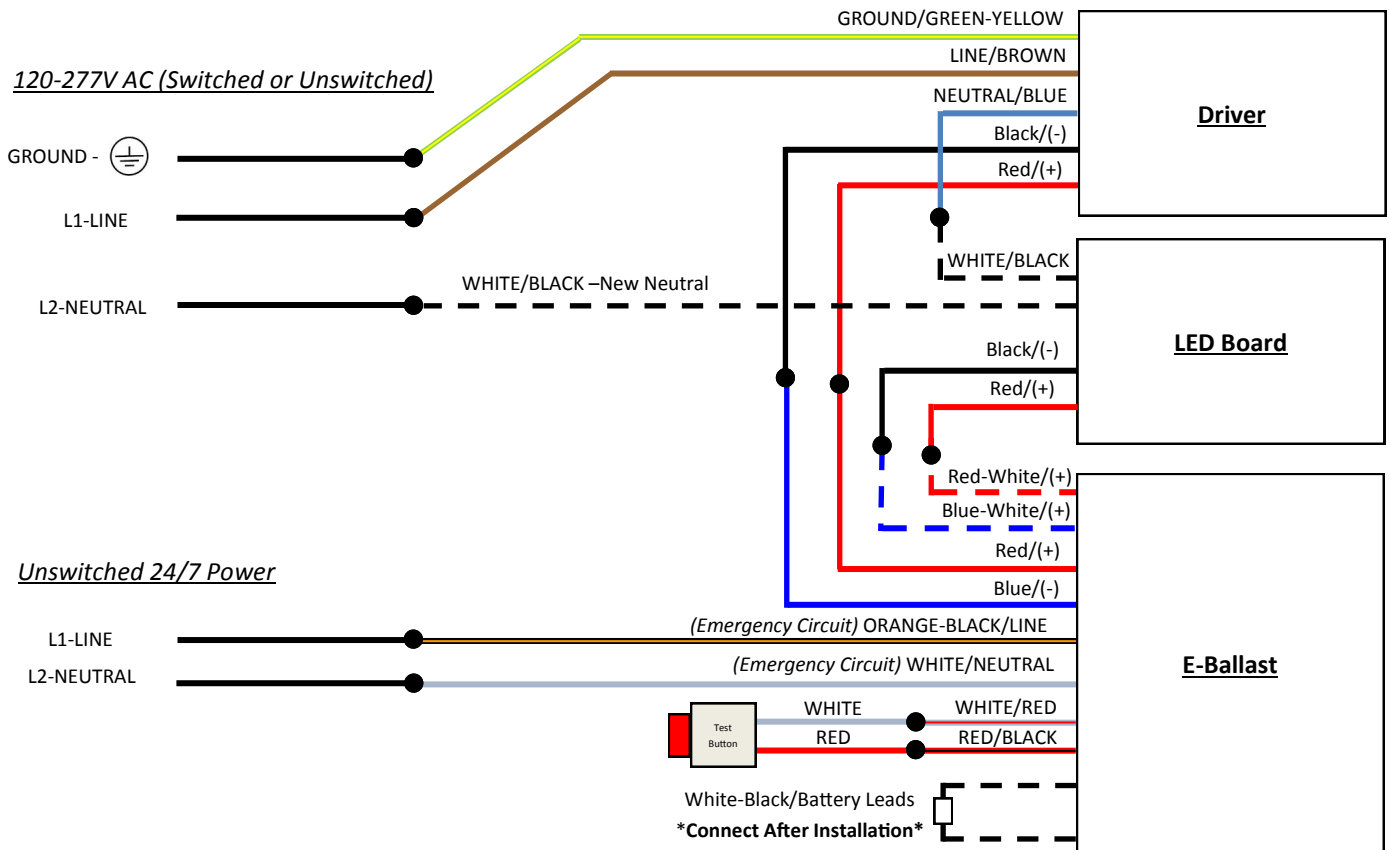

## Maintenance

\*Review EverLast Lighting Inc. warranty for a list of components covered under warranty.\*

**NOTE:** For employee safety, all power connections shall be turned off or removed before performing any maintenance on lighting fixtures. Persons performing maintenance shall be familiar with construction and operation of product, plus the hazards involved.

### Cleaning Schedule

To maintain proper efficiency of luminaire, a regular cleaning schedule needs to be established in regards to the placement, location and conditions of product installation. Frequency of cleaning shall be to the discretion of the end user, but should be no less than every 90 days. If conditions mandate, a more frequent cleaning schedule must be implemented. Improper cleaning may result in component malfunctions, product failure and voidance of warranty.

### Fixture Cleaning

- If applicable – use air to blow dust and debris from lens, hood, heatsinks and drivers before wiping with a cleaning solution.
- Use only mild, nonabrasive cleaners. Spray cleaner onto **soft** cloth and wipe surface of lens before wiping down other surfaces of lighting fixture.
- If needed – use a very **soft** brush or duster to remove excess particles from between heatsinks, drivers or other difficult to reach areas.
- Note any damage (cracking, splitting, peeling, breaks). Contact local sales representative, distributor or EverLast Lighting Inc. if damage replacement is necessary.

### Hardware

- Fixture hardware shall be inspected before each cleaning.
- Check to make sure all hardware connections are secure. Make sure to tighten any loose screws, bolts, nuts, liquid tight connectors, strain reliefs or electrical connections.
- Note any instances of damaged hardware. If any hardware is found to be consistently loose, damaged or questionable in any manner, contact local sales representative, distributor or EverLast Lighting Inc.

### Electrical Connections

- Check electrical connections each time maintenance is performed.
- Check to make sure all components (drivers, sensors, transformers, etc.) are properly connected and secured.
- Proper wiring connections and ground are imperative for fixture performance and customer safety.

### Safety Cables (if applicable)

- Safety cables shall be regularly inspected during cleaning cycles.
- Check to make sure cables and connectors show no signs of damage. If damage is found contact local sales representative, distributor or EverLast Lighting Inc. for replacements cables right away.